



# System



0

# **Power Management System**

## Features

The Mega-Guard Power Management System (PMS) is an advanced system for full automation of power plant, including power management, diesel engine control, generator control, synchronizing, generator protection and optional diesel engine safety system. Each generator set is equipped with its own independent and autonomous PMS system. This ensures the highest degree of reliability and availability. The Mega-Guard PMS is supplied as a complete product and no additional components are needed for automation of a low voltage switchboard up to 690VAC.

The Mega-Guard PMS is operated through a user friendly touchscreen (5,7" or 8") for intuitive operation and monitoring of power plant.

| Mega-Guard PMS general specification  |              |  |
|---------------------------------------|--------------|--|
| Maximum number of PMS                 | 16           |  |
| Diesel generator function             | $\checkmark$ |  |
| Shaft generator function              | $\checkmark$ |  |
| Auto bus-tie breaker function         | $\checkmark$ |  |
| Emergency generator function          | $\checkmark$ |  |
| Shore connection function             | $\checkmark$ |  |
| Auto start and synchronize            | $\checkmark$ |  |
| Manual start and synchronize          | $\checkmark$ |  |
| Load sharing                          | $\checkmark$ |  |
| Consumer block enable                 | $\checkmark$ |  |
| Preference tripping                   | $\checkmark$ |  |
| Blackout handling                     | $\checkmark$ |  |
| 1st and 2nd standby selection         | $\checkmark$ |  |
| Running hours                         | $\checkmark$ |  |
| Meter (kW, Hz, V, A, pf, kVAr)        | $\checkmark$ |  |
| Protection functions (see ANSI table) | $\checkmark$ |  |
| Communication Modbus RS485            | $\checkmark$ |  |
| Communication Modbus TCP-IP           | $\checkmark$ |  |
| Communication J1939, CAN bus          | optional     |  |
| Differential tripping                 | optional     |  |
| Diesel engine safety system           | optional     |  |



Reliable operation is guaranteed by 6 operator pushbuttons for essential functions. All essential power plant parameters are displayed on the touchscreen. The touchscreen supports swiping in between pages and activating sub menus with the touch of a finger.

Mega-Guard PMS is built-up with the following three items for each generator:

- PMS Operator Panel for flush panel mounting in switchboard
- PMS Controller for DIN rail mounting inside switchboard
- I/O Cable interconnecting the PMS Operator Panel and the PMS Controller

Both the PMS Operator Panel and the PMS Controller are equipped with a powerful ARM microprocessor for independent function execution.



# Application

Mega-Guard PMS can be configured for a mixture of the following applications:

- diesel generator
- shaft generator
- automatic bus tie breaker
- emergency generator
- shore connection

Mega-Guard PMS provides for auto starting, synchronisation and load sharing functions. Metering functions include 3 phase voltage, current, frequency and power measurement, calculation of power factor and running hours. Diesel engine, generator and circuit breaker are controlled and monitored by Mega-Guard PMS. Safety functions are executed in accordance with the applicable ANSI standard (see PMS protection function table).


Other functions include black-out start, consumer enable when enough power and preferent tripping in case not enough power available.

Mega-Guard PMS includes a PLC programming option and graphic editor which is not needed for most switchboard applications. Special applications can be programmed with the built-in and optional PLC logic. The PLC logic is in accordance with the IEC61131 standard.

Mega-Guard PMS can be extended with additional modules to realize following functions:

- Safety system for diesel engine
- Differential tripping
- Check synchronizer with back-up measurement of kW, V, A, Hz and Cos φ
- Analog control for frequency and voltage
- Additional Controllers for user functionality (requires PLC programming option)

Installation and commissioning of Mega-Guard PMS can be executed by switchboard builder and does not require special skills. The technician can easily set switchboard and power plant parameters in the Mega-Guard PMS with the user friendly PMS Operator Panel with touchscreen. Parameters such as generator power, number of generators, bus tie breaker, busbar nominal voltage, alarm limits, type of generator etc. can easily be entered in the menu driven operator interface.

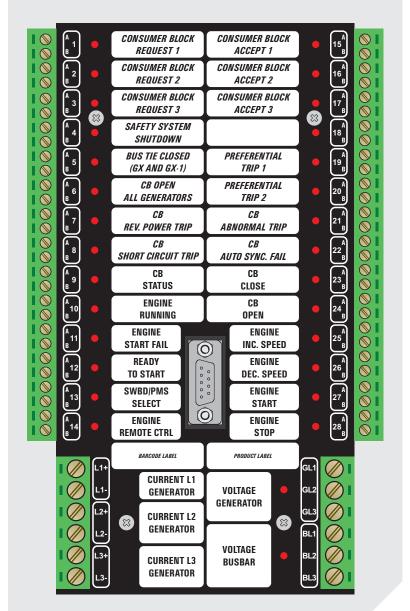

PMS Controller


# **PMS system lay-out**

# **PMS Operator Panel**

The PMS Operator Panel is supplied in a compact DIN compatible housing for flush panel mounting in switchboard. The PMS Operator Panel is equipped with a user friendly touchscreen and a powerful ARM microprocessor which executes the power management functions and optional PLC logic.

The PMS Operator Panel is available in three versions for the following market segments:

- **Commercial ships** : 5.7" touchscreen and metal front with 6 pushbuttons
- Mega yachts : 5.7" touchscreen with full glass front
- Navy ships : 8" touchscreen and metal front with 6 pushbuttons

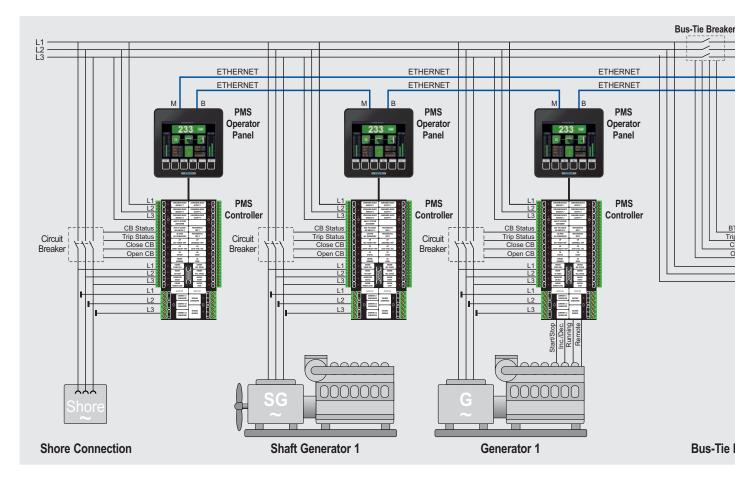

The colour touch screen continuously displays metering values (kW, Hz, V, A, pf, kVAr), circuit breaker status, standby generator number and alarms. Operator mode selection can be executed with pushbuttons or the touchscreen. The rear side of the PMS Operator Panel is equipped with detachable terminal strips, four Ethernet ports and a USB port. Communication between Mega-Guard PMS systems takes place via Ethernet wired in a loop and occupies two Ethernet ports on each PMS Operator Panel. The two remaining Ethernet ports can be used for connection to e.g. an external monitoring system and/or to the diesel engine. RS485 and CAN bus communication are supported as well. The USB port is used for a memory stick to upload or download an application program. Terminal strips are available to connect the 24VDC power supply and a number of inputs and outputs. The switchboard can be configured in such a way that installation of separate gauges is not required with Mega-Guard PMS.




# **PMS Controller**

The PMS Controller is installed on a TS35 DIN rail inside main switchboard at each generator section. I/O signals from generator, busbar, circuit breaker and engine are directly connected to this Controller. The PMS Controller is equipped with a powerful ARM microprocessor executing metering, safety and generator control functions. The PMS Controller can also be delivered as an independent check synchronizer.

The PMS Controller has the following inputs and outputs:

- 3 phase busbar voltage (0~690VAC)
- 3 phase generator current (0~5A)
- 14 digital inputs

- ▶ 3 phase generator voltage (0~690VAC)
- 14 relay outputs

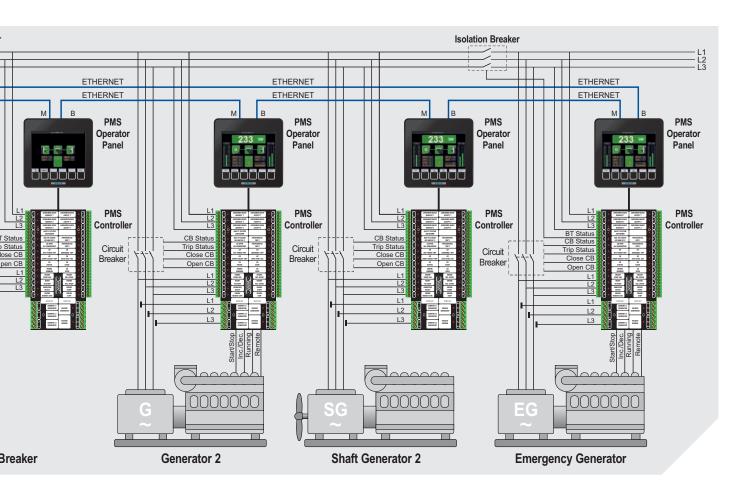

| PMS Controller typical functions relay outputs |                            | PMS Controller typical funct | PMS Controller typical functions digital inputs |  |
|--|----------------------------|------------------------------|---|--|
| CB close / open                                | CB auto sync fail          | CB status                    | Safety system shutdow                           |  |
| Engine start / stop                            | AVR increase voltage       | Engine running               | Bus tie closed                                  |  |
| Engine increase / decrease speed               | AVR decrease voltage       | Engine start fail            | CB open all generators                          |  |
| Consumer block accept                          | Frequency alarm high / low | Ready to start               | CB reverse power trip                           |  |
| Preferential trip                              | Voltage alarm high / low   | SWBD / PMS select            | CB short circuit trip                           |  |
| Shutdown                                       | Reverse power trip alarm   | Engine remote control        | Blackout detected                               |  |
| CB abnormal trip                               | Blackout                   | Consumer block request       | Harbour mode                                    |  |

The PMS Controller is connected to the PMS Operator Panel via an I/O Cable. The I/O Cable is standard available in two lengths: 3m and 5m.

# **PMS** configuration

# **PMS** configuration



PMS Operator Panel with glass front

The PMS can be configured for the particular application via the touch screen or through an external PC connected with Ethernet communication link. All power plant functions, parameters, inputs and outputs can be configured with a menu driven and user friendly operator interface. This can easily be executed by switchboard builder as no specific programming knowledge is required. Unauthorized access is prohibited by password protection. The following configuration pages are available:

- main settings
- ▶ alarm limits I/O
- start/stop
- ► CB open/close ► load sharing > auto start/stop > consumer
  - preferential group

A back-up of the configuration can be made on an external PC or on a USB stick connected to the USB port.

# PMS specification and protection

| PMS Operator Panel                              |                     |
|---|---------------------|
| 5,7" Touchscreen with 6 pushbuttons metal front | size 144x144x50mm   |
| 5,7" Touchscreen with glass front               | size 144x144x50mm   |
| 8" Touchscreen with 6 pushbuttons metal font    | size 144x216x50mm   |
| I/O Bus connector                               | $\checkmark$        |
| Ethernet ports                                  | 4                   |
| RS485 ports                                     | 2                   |
| USB maintenance port                            | 1                   |
| PWM output                                      | 1                   |
| Relay output                                    | 2                   |
| Analog input                                    | 2                   |
| Digital input                                   | 2                   |
| Micro processor                                 | ARM                 |
| PLC programming with graphic editor             | option              |
| Power supply                                    | 24Vdc (-25% ~ +30%) |
| Mounting  | flush panel         |
| Mounting bracket                                | 2                   |

| PMS Controller and IO Cable        |                 |
|------------------------------------|-----------------|
| 3 phase voltage input up to 690VAC | 2               |
| 3 phase current input up to 5A     | 1               |
| Relay output (configurable)        | 14              |
| Digital input (configurable)       | 14              |
| I/O Board connector                | 2               |
| Micro processor                    | ARM             |
| Text window for each I/O point     | $\checkmark$    |
| DIN rail mounting with clips       | TS35 rail       |
| Dimensions                         | 200x127x34      |
| Power supply via I/O Cable         | 24VDC           |
| I/O Cable with 2x 9 pole connector | 3m or 5m length |

| PMS protections with ANSI number |      |
|----------------------------------|------|
| Engine over-speed                | 12*  |
| Engine under-speed               | 14*  |
| Matching device                  | 15   |
| Overexitation                    | 24   |
| Automatic synchronizing          | 25   |
| Generator undervoltage           | 27   |
| Busbar undervoltage              | 27B  |
| Generator overload /rev. power   | 32   |
| Generator reverse current        | 37   |
| Generator loss of excitation     | 40   |
| Current unbalance                | 46   |
| Phase sequence voltage           | 47   |
| Thermal overload protection      | 49*  |
| Generator overcurrent            | 50   |
| Fast overcurrent                 | 51   |
| Voltage dependent overcurrent    | 51V* |
| Power factor                     | 55   |
| Generator overvoltage            | 59   |
| Busbar overvoltage               | 59B  |
| Voltage unbalance                | 60   |
| Ground overvoltage               | 64*  |
| Start inhibit                    | 66   |
| Auto reclosing                   | 79   |
| Generator under-frequency        | 81   |
| Generator over-frequency         | 81   |
| Busbar under-frequency           | 81B  |
| Busbar over-frequency            | 81B  |
| Non preferential tripping        | 86   |
| Differential protection          | 87*  |
| Trip circuit supervision         | 94   |
| Inrush blocking                  | 95   |

\* = optional

# TERASAKI

# Mounting & dimensions




PMS Operator Panel 5,7" touchscreen with metal front




PMS Operator Panel 5,7" touchscreen with glass front



PMS Operator Panel 8" touchscreen with metal front

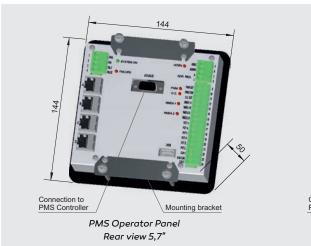

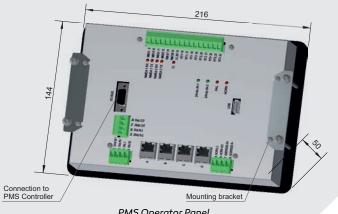

PMS Operator Panel Rear view 8"

# Image: state stat

### PMS environmental and approvals


| Environmental conditions    | IEC60945                |
|-----------------------------|-------------------------|
| Safety                      | IEC60255                |
| Accuracy                    | Class 1.0               |
| Ambient temperature         | -25 ~ 70°C              |
| Class approval              | LRS, DNV-GL, ABS        |
|                             | RINA, BV, RMRS,         |
|                             | CCS, NKK, PRS, KR       |
|                             | Incl. DP1, DP2, DP3     |
| Measuring voltage           | 0 -690VAC +/-20%        |
| Measuring current           | 0 – 5A nominal          |
| Measuring current max       | up to 200%              |
| Digital inputs              | potential free contacts |
| Digital inputs N.O. or N.C. | jumper selectable       |
| Relay outputs               | potential free outputs  |
| Relay outputs N.O. or N.C.  | jumper selectable       |
|                             | 32VDC-2A                |
|                             | 250VAC-0,5A             |
| Galvanic isolation AC side  | 2500VAC, 50Hz, 1 min    |
| Galvanic isolation I/O side | 550VAC, 50Hz, 1 min     |
|                             |                         |



Vessel Management System



Power Management System

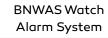



Navigation Light Control



### Wiper Control System



Fire Alarm System



Ship Performance Monitor



Fleet Management System



# Ship automation

### Terasaki Electric Co., (Far East) Pte Ltd

17, Tuas Street, Singapore 638454 Phone (+65) 65611165, Fax (+65) 65612166, Emeil tefe@terasaki.com.sg, Web www.terasaki.com.sg

### Terasaki Electric Group China Sales Main Office

Room No.1405-06, Tomson Commercial Building, 710, Dong Fang Road, Pudong, Shanghai, China 200122 Phone (+86) 21 58201611 , Fax (+86) 21 58201621, Email terasaki@vip.163.com

### Terasaki Electric Co., (Shanghai) Co Ltd

Building 5&7, No.399 Xuanzhong rd. Nanhui Industrial Zone, Shanghai, China 201314 Phone (+86) 21 58186340, Fax (+86) 21 58186350, Email tsc@terasaki.com.cn, Web www.terasaki.com.cn

### Terasaki Electric (China) Ltd

72, Pacific Industrial Park, Xintang, Zengcheng, Guangzhou , China 511340 Phone (+86) 20 82708556, Fax (+86) 20 82708586, Email Terasaki-tcssales@vip.163.com, Web www.terasaki.cn